

Wall Splash Guard Installation Instructions



1. Clean the wall surface with ISOPROPYL ALCOHOL prior to installation and make sure that the surface is dry and free of any dust and debris.

2. Center the Wall Guard underneath the hand dryer so that the top of the Wall Guard is 1" below the bottom of the dryer.

3. Carefully measure and mark the wall surface for placement of the Wall Guard with a pencil or temporary marker.

4. Four strips of double-sided adhesive are included for each panel. Apply the tape strips to textured side of black or white panel as follows:

- Lay out tape strips according to illustration at right.
- Remove one strip and apply to either right or left side to start.
- Press each tape strip firmly onto the plastic as it is applied.
- Continue until all 4 strips are applied.

NOTE: THE ALIGNMENT IS CRITICAL. ONCE PLACED ON THE WALL THE WALL GUARD CANNOT BE RE-POSITIONED.


5. Align the top edge of the Wall Guard with the markings on the wall and firmly press into place against the entire surface of the Wall Guard.

6. Optional: After guard is applied to the wall you may add silicone sealant around the edge.

CLEANING INSTRUCTIONS

Clean the installed Wall Guard with mild soapy water and a soft cloth. Mild dish soap mixed with water in a spray bottle works best.

DO NOT USE any cleaner that contains ammonia or abrasive cleansers to clean the surface.

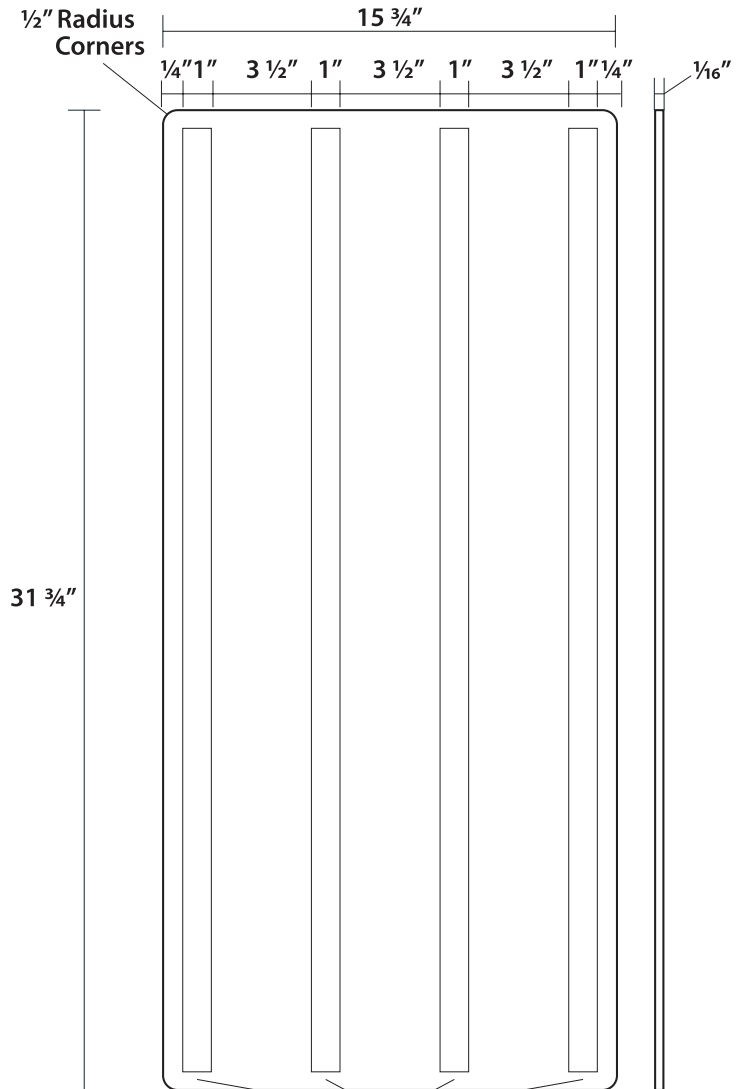

Recommended location of adhesive strips



LPM (LIGHTING PLASTICS OF MINNESOTA)

3326 Gorham Ave. • St. Louis Park, MN 55426 USA

Phone: (952) 920-1400

Email: sales@lightingplastics.com • www.lightingplastics.com